

# INSTALLATION INSTRUCTION MANUAL EXITE PL LED AREA LIGHT EA BRACKET 100-277VAC/277-480VAC

**Introduction:**

This LED Area light uses the latest in solid state lighting technology for long life, low maintenance, and high efficiency. There are Multiple installation methods, suitable for various occasion.

**Warning:**

To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding conductor.

To avoid explosion:


- Make sure the supply voltage is the same as the rated luminaire voltage.
- Do not install where the marked operating temperatures exceed the ignition temperature of the hazardous atmosphere.
- Do not operate in ambient temperatures above those indicated on the luminaire nameplate.
- Keep lens tightly closed when in operation.

For supply connections use wire rated for at least 90°C

**After installation:**

- Check whether the lighting fixture is firmly fixed.
- Check whether wires are connected correctly.
- At last, turn on the power, and check if the lighting fixture works.

**EA**

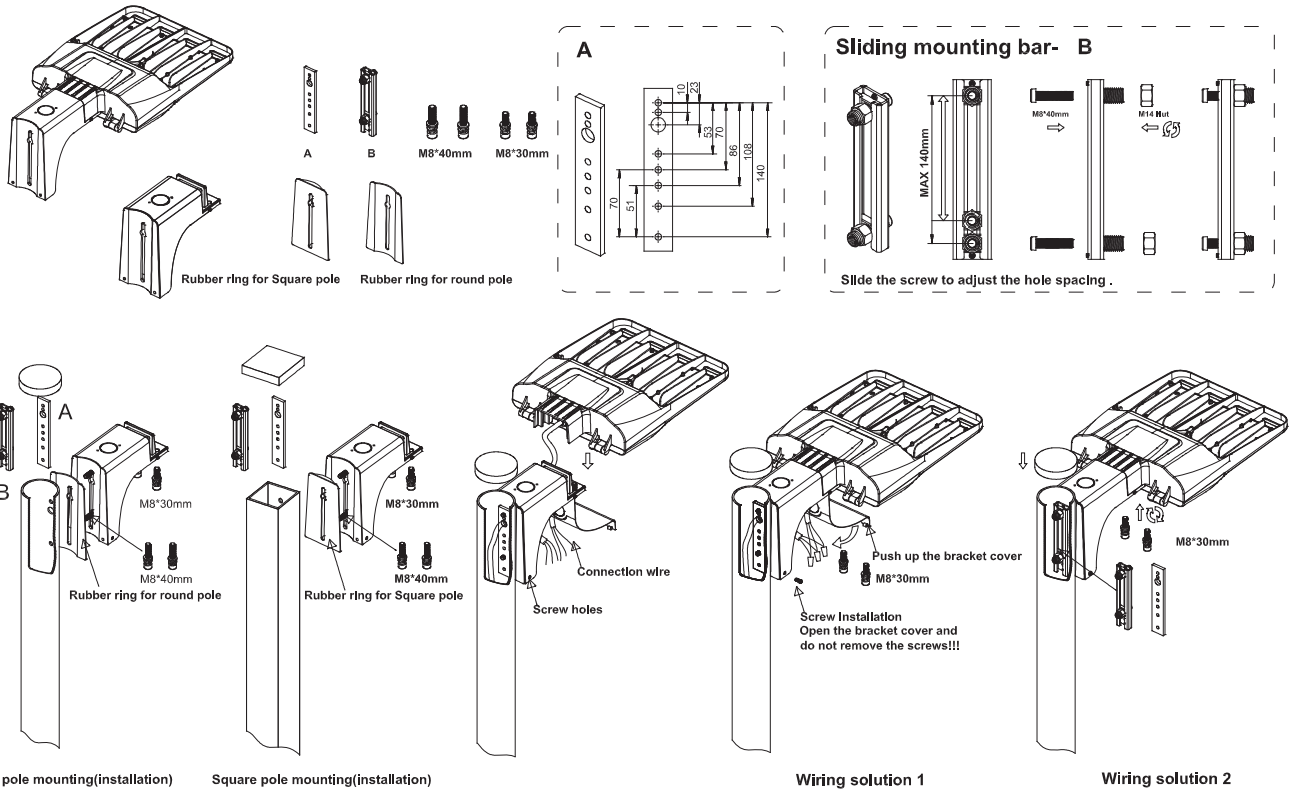

Circular pole mounting(installation)

Square pole mounting(installation)

Wiring solution 1

Wiring solution 2