
 
# IRIS R2 C1D2


## **Product Installation**
 
# **Ceiling Mounting**

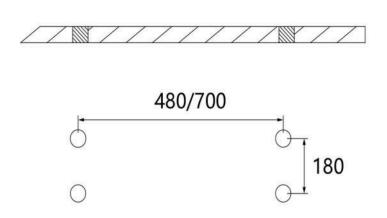



- 1.1.Drill four holes as above size and install expended screws(2FT fixture for 480mm.4FT for 700mm distance).
- 2.Install the light to ceiling and tighten the nuts.



3. Properly connect wires and conduit.

4.Installation complete.

## Safety caution


- 1 Power supply must be disconnected before opening the diffuser for maintenance. Scratch or damage on joint surface is strictly prohibited during maintenance.
- 2 Before use, to check whether the voltage of the power supply is consistent with that of the luminaire/lamp to avoid damage caused by the voltage discrepancy. Also, do not open the cover for live inspection.
- 3 Non-professionals are strictly prohibited for any maintenance.

### **Features of the Emergency Driver**

CAUTION: Sealed unit. Battery not replaceable. Replace entire unit when necessary.

	Input Rating				Emergency Output Rating	
	Vac	Hz	Max.A	Max.W	Vdc	Constant Wattage, W
650	120-277	50/60	0.15	9	42-50	15

Model	Charge Time,	Emergency	Use	Rated Ambient	Battery Life
	Hours	Run Time, Min	Environment	Range, °C	Expectancy
	24	90	Damp	-10~60	5 Years

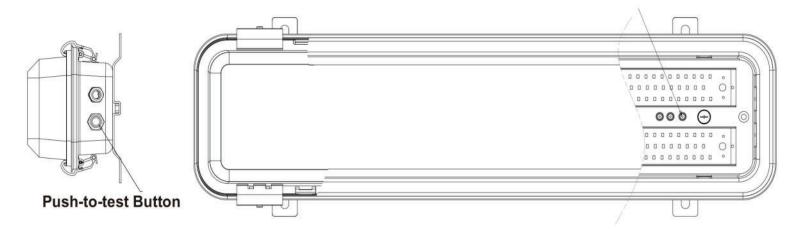

LED Indicator State	Representation			
Green Light On	Battery charging capacity is more than 80% or fully charged			
Red Light On	Battery charging capacity is less than or equal to 80%			
Yellow Light On	1.Product failure. 2.Battery charging or discharging capacity is less than or equal to 20%			

#### Notes:

1. Press the **Push-to-test Button** to switch to "Emergency Mode" while the fixture is connected to the municipal electricity. If the green light is on, it indicates that the emergency driver pack is working fine.

Press the Push-to-test Button again to switch back to "Normal Mode".

2. Press the **Push-to-test Button** and hold for 3-5 seconds to turn off the fixture. It will then need to be activated by connecting to municipal electricity again.