
## **ALUME AR INSTALLATION**

## 1.ADJUSTABLE FITTER MOUNTING (AM)

Step 1:Loosen the four bolts on AM bracket, connect the wires correctly, and pull the wires into the poles. (Figure 1)

Step 2: Place the bracket into the pole and lock the four bolts. (Figure 2)

Notice: Adjustable angle is 0-90° (Figure 1)

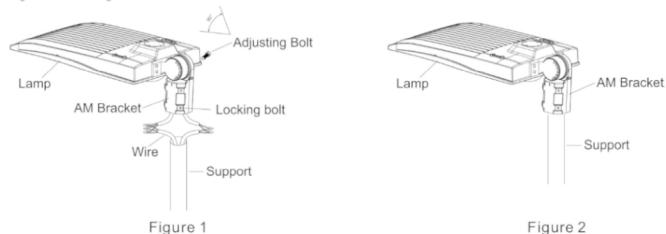


## 2.DIRECT MOUNTING (DM)

Step 1:Fix DM bracket to square pole with bolt, open the side lid of DM bracket, pull the wire intojunction box, and connect the wire correctly. (Figure 3) Step 2: Put the connected wire into the junction box, then cover the junction box. (Figure 4)

Notice: Adjustable angle is 0-35°(Figure 3).

Same as round pole installation, please remember to remove the silicon plate when install thefixture in round pole (Figure 5)

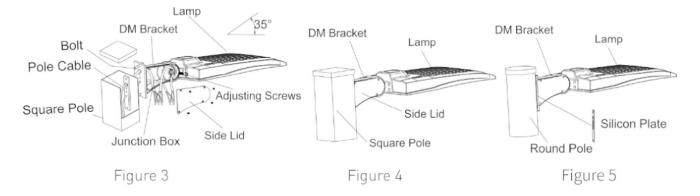

## 3.YOKE MOUNTING (YM)

Step 1: Drill holes on the wall as shown. (Figure 6)

Step 2: Knock the expansion bolts into the wall. (Figure 7)

Step 3:Connect the fixture to the bracket and tighten the screws; connect the wires properly and

put them into junction box. (Figure 8)

Notice: Adjustable angle is 0-90° (Figure 8)

