


# ALUME C1D1 EXIT SIGN INSTALLATION

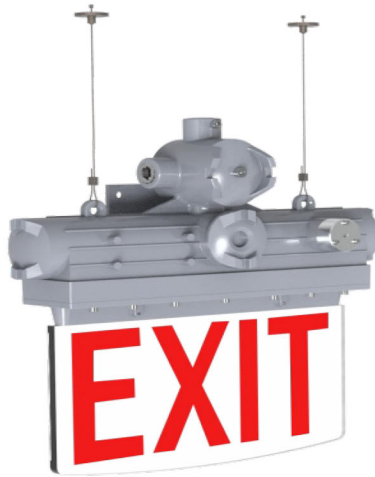

## Explanation of Indicator Light:

RGY: three-colors indicator light

If two or three indicator lights remain ON during initial power-up, the unit must reset using the switch, press and hold the ON switch for 5-6s until unit turns off, release the switch, press ON switch again to turn the unit ON, the indicator lights should turn to normal operation after reset.

### • RED

1. Fast charging for 2 hours.
2. Charging indicator, displaying 20% -80% battery capacity.

### • GREEN

1. Trickle charging.
2. Charging indicator, displaying 80% -100% battery capacity
3. Green light on when disconnecting the battery

### • YELLOW:

1. Discharge below 20%.
2. If the yellow light is on in any state, the product is out of order.

## Explanation of Switch:

Magnetic Switch:

1. Press the ON Switch once, the EXIT sign and indicator light will flash once, the flashing cycle has an ON/OFF interval of 10 seconds.
2. When the main power is disconnected, press and hold the switch for 3 to 5 seconds to turn off the product. To turn EXIT sign ON again, restore the main power, the unit will activate automatically.

### Two Options of Function:

Model 1: EXIT sign remains illuminated whether the main power is ON or OFF


Model 2: EXIT sign does not illuminate when the main power is on, but turns ON immediately during a power outage.

### Certifications:


Marking UL844 (North America)  
Class I, Division 1, Groups B,C,D /  
Class I, Division 2, Groups A, B, C, D  
Class II, Division 1, Groups E, F, G/  
Class II, Division 2, Groups F, G  
Class III, UL924/UL844/UL121201/CSA NO.213/CSA C22.2 No.137-18

## ► Mounting Methods and Accessories:

### Wall Mounting:

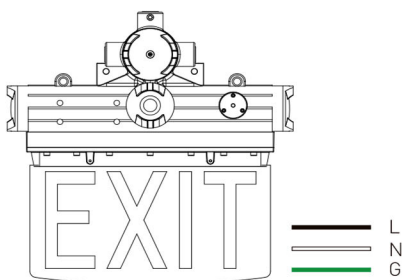

### Pendant Pipe Mounting :

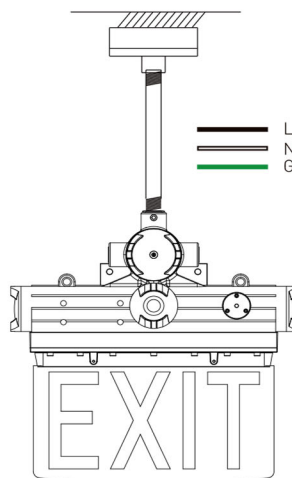

### Pendant Chain Mounting:

