ALUME WP INSTALLATION

Special Function

60W	80W	100W	120W	3500K	4000K	5000K
■	□	□	□	■	□	□

Power	CCT

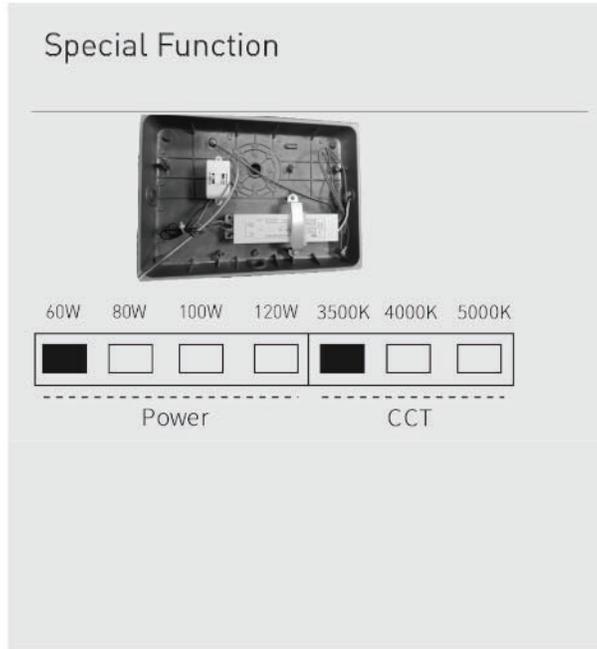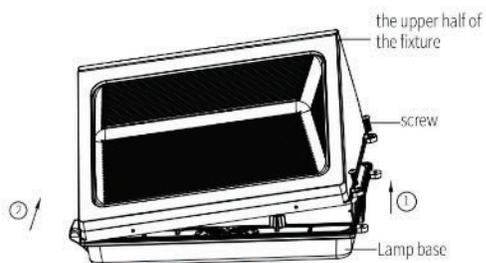## Installation Instruction

1.Use a screw driver to unscrew the lamp and remove the uppper half of the fixture.

the upper half of the fixture

screw

Lamp base

2.Unscrew the cover of the entry hole on the lamp base and remove the cover.

the cover of the entry hole
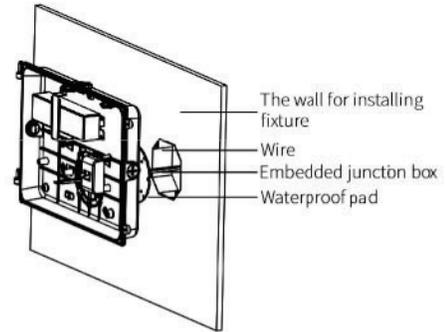
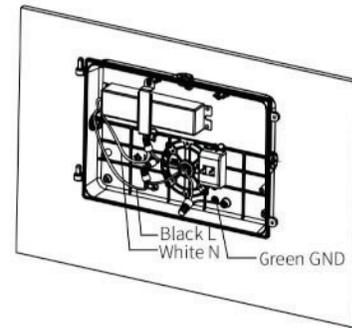3.According to the embedded terminal box,punch the corresponding mounting hole on the lights mount.
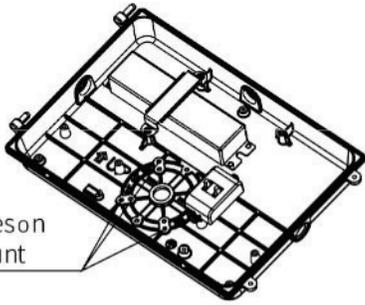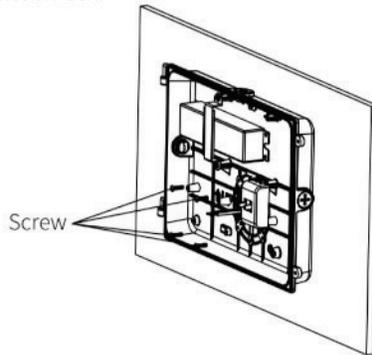

Mounting holes on the light's mount

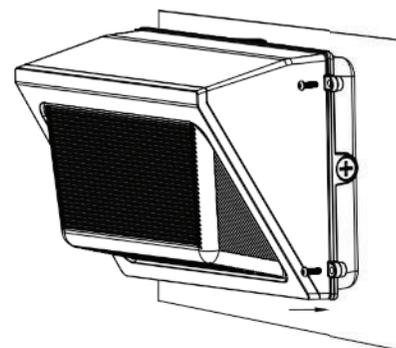4.Put the input wire in the embedded box passes through the waterproof pad and then pass through the lamp base.

The wall for installing fixture
Wire
Embedded junction box
Waterproof pad

5.Use screw to lock the lamp base on the embedded junction box.

Screw

6.Connect the input wire and the dimming wire of the light , then put the connected wires into the embedded terminal box.

Black L
White N
Green GND

7.Connect the output wires of driver with the wires of PCB board.

Please use"Dipper Switch",to achieve"Power and CCT Tunable" function.

Connect

Dipper swith for "Power and CCT Tunable"

8.Use screws to lock the fixture. Installation completed.