


# ALUME HPT INSTALLATION INSTRUCTION

Note: If mount base is pre-installed, Please skip step 1 and 2, just follow step 3 and 4

- 1 Remove four screws from top roof, open it and get the mount base out.



- 2 Get the cord through the middle hole of mount base, then attach the mount base to bottom of the fixture, align the screw holes and fix it. Close the top roof and tighten four screws

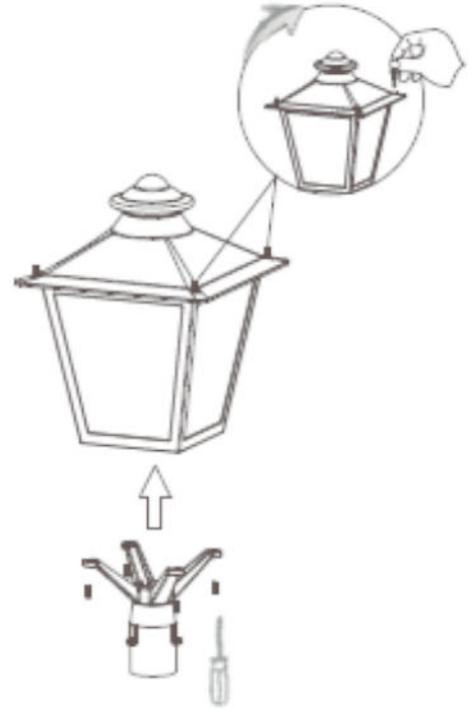

- 3 Connect the ACL and the ACN from the lighting fixture to the conduit with the AC power supply cords. Follow the wiring diagram provided as below.



- 4 Slip the fixture over the pole and tighten three screws with the mount bases below.

