

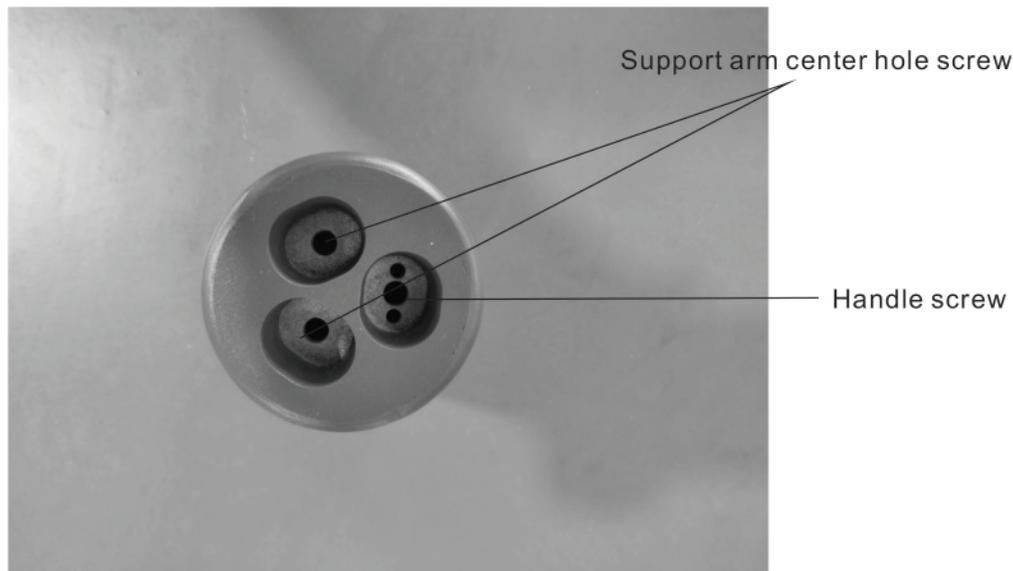


ALUME PT INSTALLATION

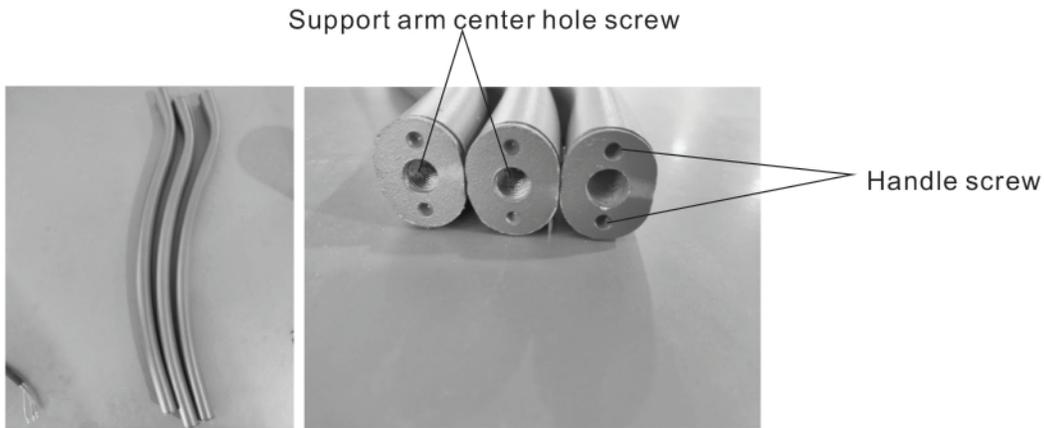

Put the support arm into the corresponding handle slot

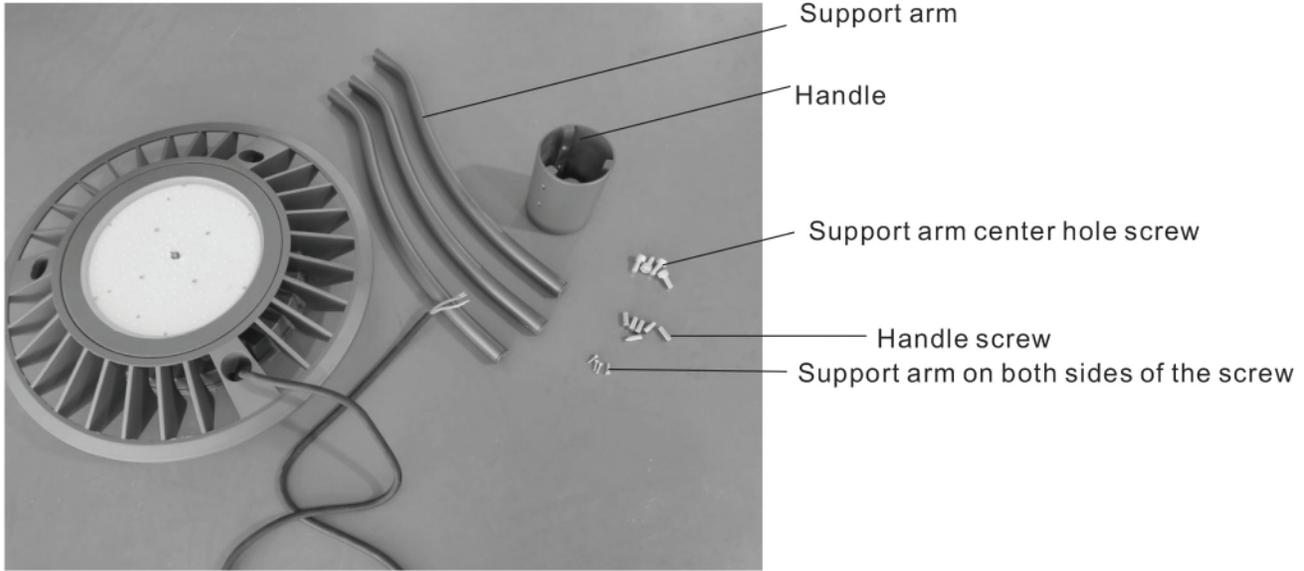

Lock the handle with the relevant screws