

# ALUME WPR

## Instruction

### Warning :

- 1.Can not use the electric generator to test the LED lamp.
- 2.This luminaire must be installed in accordance with your local electrical codes and requirements.
- 3.Do not install the luminaire in the rain, to avoid lightning stroke and damage to luminaire.

### Installation notice :

- 1.This luminaire must be installed by qualified electrician to avoid electric shock and fire accident;
- 2.Wear gloves before installation in order to avoid injury;
- 3.Turn off the power immediately when there is smoke and fire during installation; inform professionals to overhaul;
- 4.This luminaire is suited for outdoor use.

The installation of the product can be used when it is marked with "V " .

### Installation I :

#### Wiring from the bottom of luminaire

- 1.Cut holes on the wall according to locating plate.(Figure 1-1)

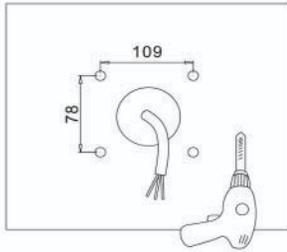


Figure 1-1

- 2.Fix rubber plugs into holes.(Figure 1-2)

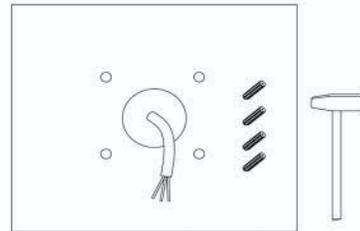


Figure 1-2

- 3.Align mounting bracket with hole; tighten screws.(Figure 1-3)

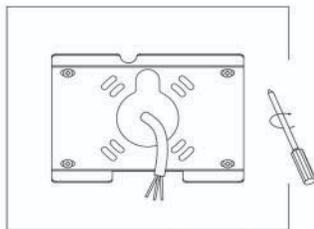


Figure 1-3

- 4.Make wiring connection and go through isolation treatment.(Figure 1-4)

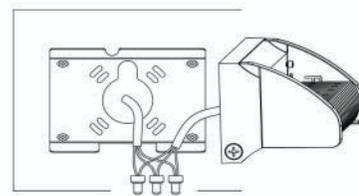


Figure 1-4

- 5.Fix the luminaire on the bracket and tighten screws on the bottom(Figure 1-5)

- 6.After installation, tighten the screws.(Figure 1-6)

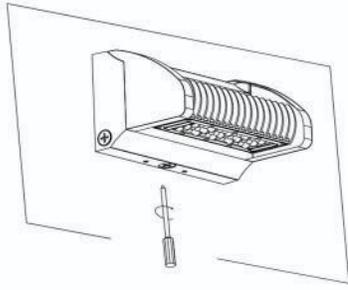


Figure 1-5

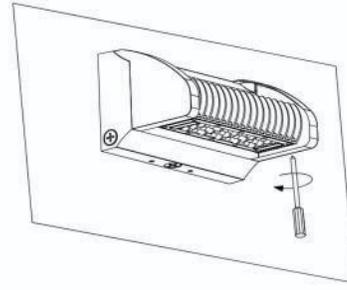


Figure 1-6

**Installation II :**  
**Wiring from the bottom of luminaire**

1. Cut holes on the wall according to locating plate .(Figure 2-1)

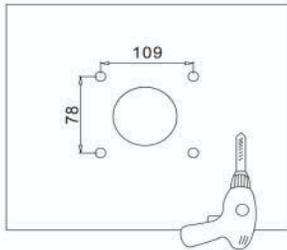


Figure 2-1

2. Fix rubber plugs into holes.(Figure 2-2)

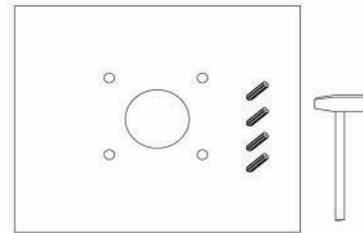


Figure 2-2

3. Align mounting bracket with hole; tighten screws. (Figure 2-3)

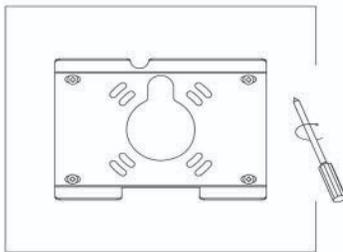


Figure 2-3

4. Fix the luminaire on the bracket; make wiring connection from side and go through isolation treatment.(Figure 2-4)

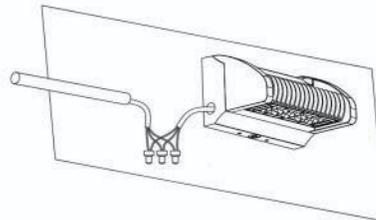


Figure 2-4

5. Tighten the pipe on the luminaire; after installation, tighten the screws.(Figure 2-5)

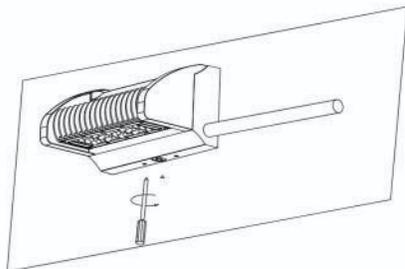


Figure 2-5