


ALUME XS


Installation Instruction

Installation method I : Ceiling Installation


1. Loosen the screw to take off the mounting plate from the lamp.

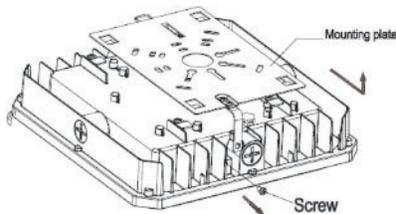


2. Screw the mounting plate to the ceiling.

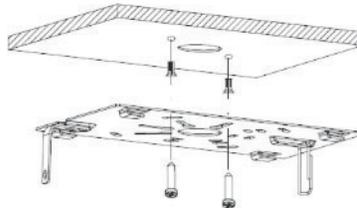


3. Hang the lamp on the ring so as to connect wires with terminal caps.

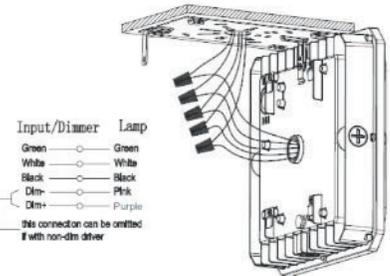

4. Hook up lamp on the mounting plate.

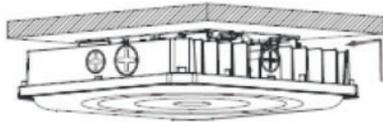


5. Secure the screw. Installation completed.

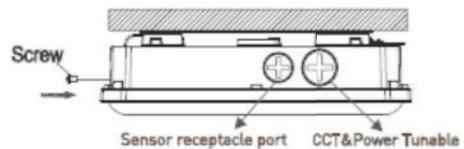


Installation method II: Pendant pipeline Installation

1. Connecting wires with terminal caps as picture shows

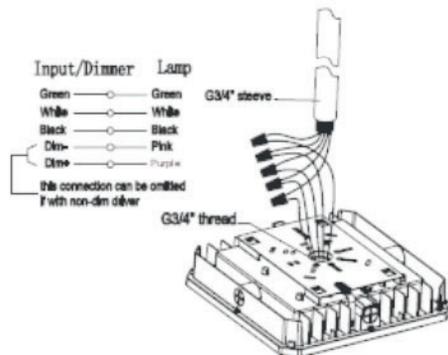


2. Rotating the sleeve to make it fixed with lamp. Installation completed.

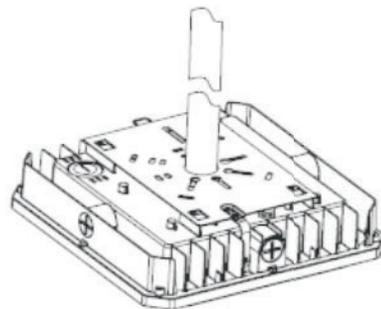


Plug & Play Sensor installation

1. Unscrew the PC cap on the lampshade counter-clockwise with a flat-head screw driver on the lamp which already installed.

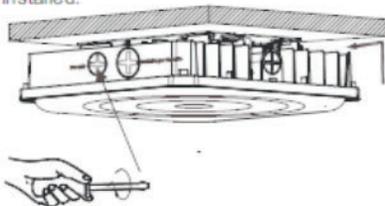

2. Screw the sensor clockwise by hands.

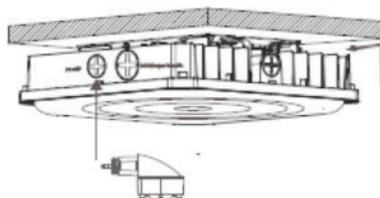

3. After tighten the sensor, lighting the lamp, if the sensor works well, the installation finish.

