

Iris EX C1D2 Square Installation Instructions

HAZARDOUS LOCATION LED High Bay(Type A)

Important

READ INSTRUCTIONS CAREFULLY BEFORE INSTALLING. KEEP THIS INSTRUCTIONS FOR FUTURE REFERENCE

Fixtures must be wired in accordance with the National electrical code and all applicable local codes. Proper grounding is required for safety.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A QUALIFIED ELECTRICIAN WHO IS FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Risk of fire or electric shock. High bay Light installation requires knowledge of luminaires and electrical systems. If not qualified, DO NOT try to install. Please contact an electrician.


WARNING: Risk of fire or electric shock. Suitable for wet locations. Make sure the power is off prior to install.

WARNING: Risk of fire or electric shock. Suitable for non-insulated surface and frame. DO NOT cover fixture with insulation liner or similar material.

WARNING: DO NOT install in unstable, loose or breakable surfaces.

WARNING: DO NOT let objects impact or exert force on the surface of the fixture.

Installation and Electrical Connection

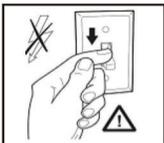


WARNING

RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY


Before installation, turn power off.




The specific steps of installation (Ceiling mounted)

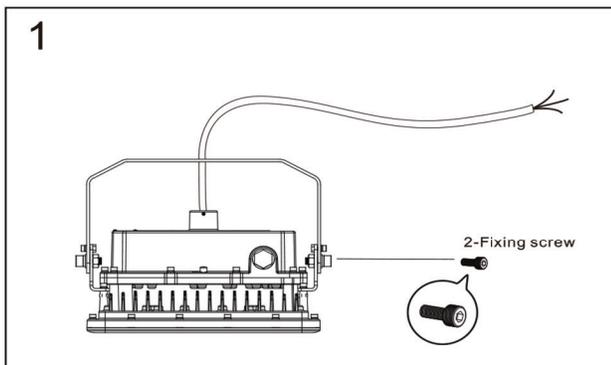


1. Take the fixture and accessory out from carton box, tighten 2x angle holder screw as Fig.1.

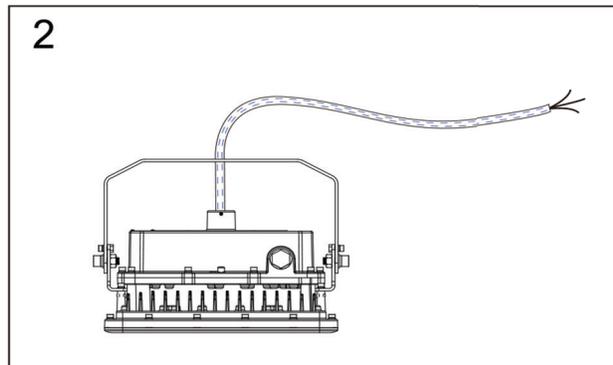

2. Flexible metal conduit install and tighten with the fixture.

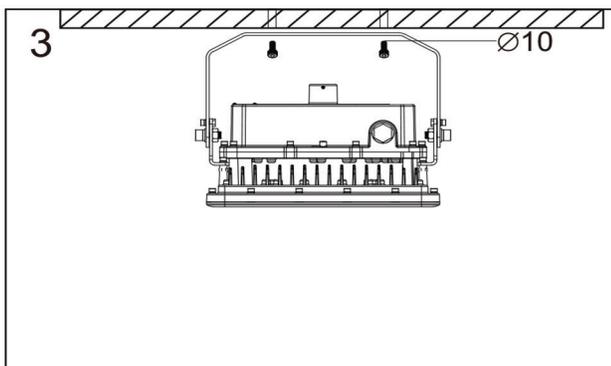


3. Drill 2x hole as Fig.2, the distance can be 113-167mm, fixing Ø10 expansion screws and bracket on ceiling.

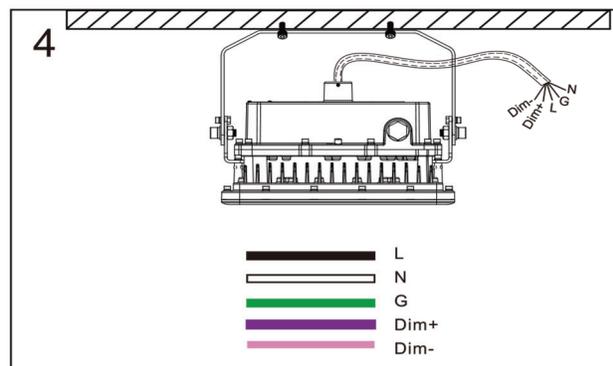


4. Connect the AC cable to power supply, black to L, white to N, green to G, purple to Dim+, pink to Dim-.


2 The specific steps of installation (Wall mounted)

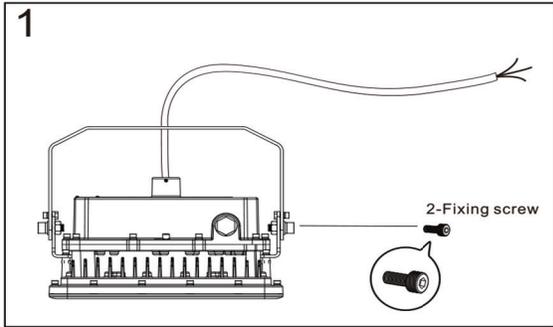


1. Take the fixture and accessory out from carton box, tighten 2x angle holder screw as Fig.1.

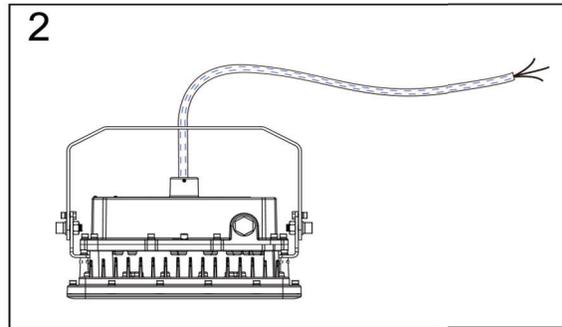

2. Flexible metal conduit install and tighten with the fixture.

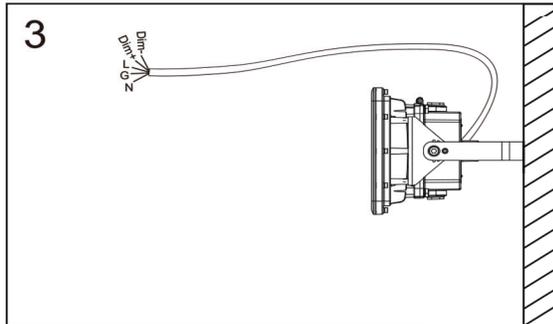


3. Drill 2x holes as Fig.2, the distance can be 113-167mm, fixing Ø10 expansion screw and bracket on.

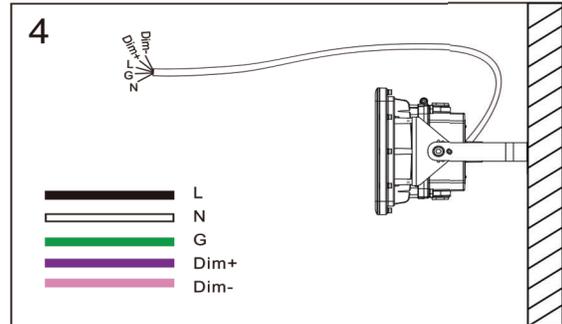


4. Connect the AC cable to power supply, black to L, white to N, green to G, purple to Dim+, pink to Dim-.


3 The specific steps of installation (Pole mounted)

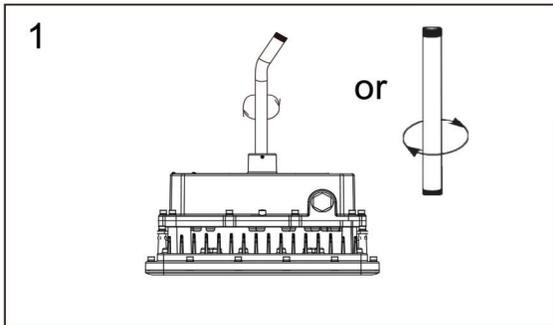


1. Take the fixture and pole accessory out from carton box, tighten pole as Fig.1. (Linear pole)

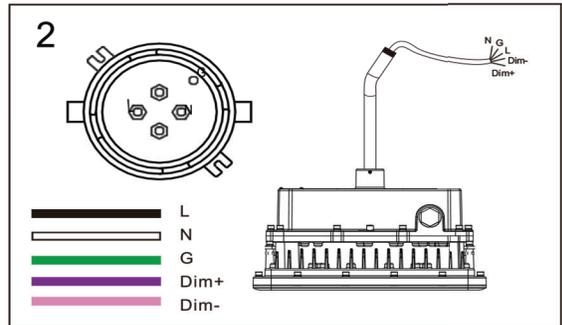

2. Connect the AC cable to power supply, black to L, white to N, green to G, purple to Dim+, pink to Dim-.

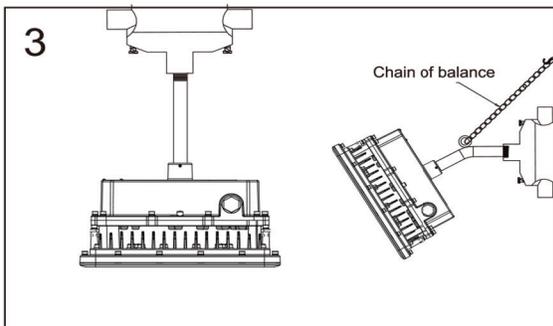

3. Install the installation box to the wall or ceiling as Fig.2. Tighten the pole to the box, and adjust the chain of balance.

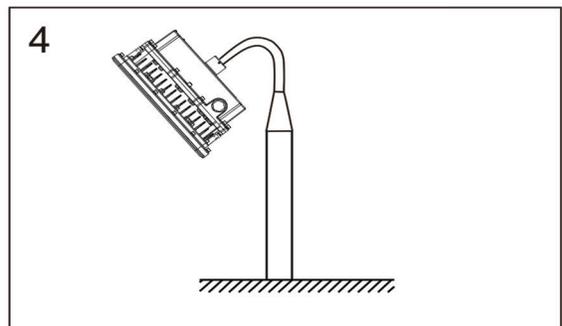

4. Install the fixture to the pole after cable connecting.